

### IMS-4000 Node



## Description

The IMS-4000 Node allows IMS-4000 users to expand their infrastructure and monitor additional inputs in locations away from the IMS-4000 Host. Up to thirty-one Nodes can be used with each IMS-4000 Host. Much like the Host, the Node can monitor eight inputs for environmental conditions and or alarm contacts from other computer equipment such as UPS systems. The Node connects to the Host via a RJ-45 10/100BASE-T Ethernet and is monitored via the ConsoleView software included with the Host.

## Features

The IMS-4000 Node includes the following key features:

- Eight sensor inputs per Node to monitor environmental conditions and/or alarm contacts from other computer equipment such as UPS systems.
- 10/100BASE-T Ethernet port for inter-operation with other IMS-4000 equipment and network devices.
- RS-232 serial port for local configuration.
- Internal battery backup for uninterrupted performance.
- Microphone for detecting audible alarms such as smoke detectors.
- Compact design allows rack-mount, wall-mount, or tabletop installation.
- ConsoleView software to program and manage your IMS-4000 system.

### Package Contents

- (1) IMS-4000 Node
- (1) AC Adapter
- (1) Serial Cable
- (1) Rack Mounting Bracket & Hardware
- (1) Installation CD
- (1) Solution Manual

## Description

## Part Number

IMS-4000 Enterprise Monitoring Node Expansion Unit . . . . .	IMS-4002
IMS-4000 International Node . . . . .	IMS-4003